

G2 Midi map				20/March/2016											
Prepared by: The GigRig Tech team															
Guide to G2's Midi in and Midi out															
Midi in Function	G2 Bank	Midi Channel	Midi program change.	Midi in Function	G2 Bank	Midi Channel	Midi program change.	Midi in Function	G2 Bank	Midi Channel	Midi program change.	Midi in Function	G2 Bank	Midi Channel	Midi program change.
Master/start up	1	CH 1 or 6	0	Master/start up	3	CH1 or 6	32	Master/start up	5	CH 1 or 6	64	Master/start up	7	CH1 or 6	96
Foot switch 1	1	CH 1 or 6	1	Foot switch 1	3	CH1 or 6	33	Foot switch 1	5	CH 1 or 6	65	Foot switch 1	7	CH1 or 6	97
Foot switch 2	1	CH 1 or 6	2	Foot switch 2	3	CH1 or 6	34	Foot switch 2	5	CH 1 or 6	66	Foot switch 2	7	CH1 or 6	98
Foot switch 3	1	CH 1 or 6	3	Foot switch 3	3	CH1 or 6	35	Foot switch 3	5	CH 1 or 6	67	Foot switch 3	7	CH1 or 6	99
Foot switch 4	1	CH 1 or 6	4	Foot switch 4	3	CH1 or 6	36	Foot switch 4	5	CH 1 or 6	68	Foot switch 4	7	CH1 or 6	100
Foot switch 5	1	CH 1 or 6	5	Foot switch 5	3	CH1 or 6	37	Foot switch 5	5	CH 1 or 6	69	Foot switch 5	7	CH1 or 6	101
Foot switch 6	1	CH 1 or 6	6	Foot switch 6	3	CH1 or 6	38	Foot switch 6	5	CH 1 or 6	70	Foot switch 6	7	CH1 or 6	102
Foot switch 7	1	CH 1 or 6	7	Foot switch 7	3	CH1 or 6	39	Foot switch 7	5	CH 1 or 6	71	Foot switch 7	7	CH1 or 6	103
Foot switch 8	1	CH 1 or 6	8	Foot switch 8	3	CH1 or 6	40	Foot switch 8	5	CH 1 or 6	72	Foot switch 8	7	CH1 or 6	104
Foot switch 9	1	CH 1 or 6	9	Foot switch 9	3	CH1 or 6	41	Foot switch 9	5	CH 1 or 6	73	Foot switch 9	7	CH1 or 6	105
Foot switch 10	1	CH 1 or 6	10	Foot switch 10	3	CH1 or 6	42	Foot switch 10	5	CH 1 or 6	74	Foot switch 10	7	CH1 or 6	106
Foot switch 11	1	CH 1 or 6	11	Foot switch 11	3	CH1 or 6	43	Foot switch 11	5	CH 1 or 6	75	Foot switch 11	7	CH1 or 6	107
Foot switch 12	1	CH 1 or 6	12	Foot switch 12	3	CH1 or 6	44	Foot switch 12	5	CH 1 or 6	76	Foot switch 12	7	CH1 or 6	108
Foot switch 13	1	CH 1 or 6	13	Foot switch 13	3	CH1 or 6	45	Foot switch 13	5	CH 1 or 6	77	Foot switch 13	7	CH1 or 6	109
Foot switch 14	1	CH 1 or 6	14	Foot switch 14	3	CH1 or 6	46	Foot switch 14	5	CH 1 or 6	78	Foot switch 14	7	CH1 or 6	110
Engage	1	CH 1 or 6	15	Reset	3	CH1 or 6	47	Test	5	CH 1 or 6	79	Master Preset	7	CH1 or 6	111
Master/start up	2	CH 1 or 6	16	Master/start up	4	CH1 or 6	48	Master/start up	6	CH 1 or 6	80	Master/start up	8	CH1 or 6	112
Foot switch 1	2	CH 1 or 6	17	Foot Switch 1	4	CH1 or 6	49	Foot switch 1	6	CH 1 or 6	81	Foot Switch 1	8	CH1 or 6	113
Foot switch 2	2	CH 1 or 6	18	Foot Switch 2	4	CH1 or 6	50	Foot switch 2	6	CH 1 or 6	82	Foot Switch 2	8	CH1 or 6	114
Foot switch 3	2	CH 1 or 6	19	Foot Switch 3	4	CH1 or 6	51	Foot switch 3	6	CH 1 or 6	83	Foot Switch 3	8	CH1 or 6	115
Foot switch 4	2	CH 1 or 6	20	Foot Switch 4	4	CH1 or 6	52	Foot switch 4	6	CH 1 or 6	84	Foot Switch 4	8	CH1 or 6	116
Foot switch 5	2	CH 1 or 6	21	Foot Switch 5	4	CH1 or 6	53	Foot switch 5	6	CH 1 or 6	85	Foot Switch 5	8	CH1 or 6	117
Foot switch 6	2	CH 1 or 6	22	Foot Switch 6	4	CH1 or 6	54	Foot switch 6	6	CH 1 or 6	86	Foot Switch 6	8	CH1 or 6	118
Foot switch 7	2	CH 1 or 6	23	Foot Switch 7	4	CH1 or 6	55	Foot switch 7	6	CH 1 or 6	87	Foot Switch 7	8	CH1 or 6	119
Foot switch 8	2	CH 1 or 6	24	Foot Switch 8	4	CH1 or 6	56	Foot switch 8	6	CH 1 or 6	88	Foot Switch 8	8	CH1 or 6	120
Foot switch 9	2	CH 1 or 6	25	Foot Switch 9	4	CH1 or 6	57	Foot switch 9	6	CH 1 or 6	89	Foot Switch 9	8	CH1 or 6	121
Foot switch 10	2	CH 1 or 6	26	Foot Switch 10	4	CH1 or 6	58	Foot switch 10	6	CH 1 or 6	90	Foot Switch 10	8	CH1 or 6	122
Foot switch 11	2	CH 1 or 6	27	Foot Switch 11	4	CH1 or 6	59	Foot switch 11	6	CH 1 or 6	91	Foot Switch 11	8	CH1 or 6	123
Foot switch 12	2	CH 1 or 6	28	Foot Switch 12	4	CH1 or 6	60	Foot switch 12	6	CH 1 or 6	92	Foot Switch 12	8	CH1 or 6	124
Foot switch 13	2	CH 1 or 6	29	Foot Switch 13	4	CH1 or 6	61	Foot switch 13	6	CH 1 or 6	93	Foot Switch 13	8	CH1 or 6	125
Foot switch 14	2	CH 1 or 6	30	Foot Switch 14	4	CH1 or 6	62	Foot switch 14	6	CH 1 or 6	94	Foot Switch 14	8	CH1 or 6	126
Pre gain Down	2	CH 1 or 6	31	Pre Gain Up	4	CH1 or 6	63	Post Gain Down	6	CH 1 or 6	95	Post Gain Up	8	CH1 or 6	127
No Response	All	other	Any	No Response	all	other	Any	No Response	All	other	Any	No Response	All	other	Any

Midi out is the same as MIDI in; however, you can send the programme change code on up to three midi chanel from each foot switch. Set this using Spcial Function 7. Each of the three sends can go out on a separate midi channel; 10 channels are available. G2 will respond on Ch1 and Ch 6 The order of the three midi codes sent from each foot switch is determined by the order the buttons were pressed when setting up the midi send using special Function 7.